

GET TO KNOW YOUR HOT PADDLE BRUSH



WARNING: The hot paddle brush will get very hot within a few seconds and should not come in contact with skin after it is turned on.

USER MAINTENANCE

Your hot brush is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the hot brush from the power source, let it cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the hot brush, allow it to cool, and return it for repair to an authorized service center only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the hot brush. Damage will occur at the high flex point of entry into the hot brush, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

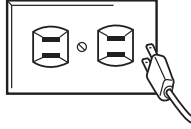

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FOUR-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 48 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 48 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 48-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap line cord around appliance.**

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This styling brush is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: DO NOT USE THIS STYLING APPLIANCE ON HAIR EXTENSIONS.

GETTING STARTED

The brush's 3 high heat temperature settings and Instant Heat technology provide unique styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick or wavy hair, keep the heat setting on high. You can vary the brush's temperature according to your particular need!

Temperature Setting Guide

TEMP. CONTROL	HAIR TYPE
Low 356°F	Delicate, thin or easy-to-style hair
Medium 375°F	Average to thick or treated hair
High up to 400°F	Thick or wavy hair

STYLING WITH THE DIAMOND-INFUSED CERAMIC-CERAMIC EASY-GLIDE PADDLE

Diamond Brilliance® combines luxuriously smooth diamond-infused ceramic with advanced ionic technology. The diamond-infused ceramic-coated surface helps smooth down flyaways and frizz. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

The unique combination of heated diamond-infused ceramic and silicone bristles provides better contact and superior styling for beautifully defined, lasting results. The metal bristles retain heat while styling, and the silicone bristles add shine.

IONIC TECHNOLOGY

The heat-activated hot/paddle brush also includes a powerful, high-voltage ion generator. The advanced ion generator generates up to 50% more ions to:

- reduce flyaways and frizzy hair
- eliminate static electricity
- enhance shine

NOTE: The unit may produce a clicking sound at times, which is normal for a high output ion generator.

TO STYLE HAIR

The hot paddle brush is perfect for everyday, styling and touch-ups. Simply slide the switch to choose the temperature setting and follow these steps to detangle and smooth hair.

BEAUTY TIPS:

To achieve the looks you love and for more great infinitiPRO by conair® products, visit: infiniti.conair.com

Please register this product at: www.conair.com/registration

For info on any Conair or InfinitiPRO by Conair product call: **1-800-3-CONAIR** or visit us on the web at: www.conair.com/infiniti

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2016 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

16PA022480

IB-14338A

1. Ensure hair is fully dry. Use a hairbrush to remove any tangles from the hair and create your part, getting ready for styling.



2. Place the heated brush underneath the hair section close to the roots with the bristles pointing upward. Use your other hand to pull the hair section taut against the heated plate until the bristles penetrate through the hair.



3. Glide the heated brush steadily down toward the ends of the hair. Continue to use the other hand to keep the hair taut, sliding it down the section ahead of the brush. Please note: The hand sliding down the hair section must not be too close to the brush to avoid any heat contact.



4. As the heated brush nears the end of the hair, release the section with the other hand and turn the heated brush under to give shape at the ends of the hair.



5. To finish your style and smooth the top of the hair, place the heated brush on the top of the hair section. Use the other hand to pull the section upward and taut against the heated plate until the bristles penetrate through the hair. Take care to avoid pressing the heated plate against the scalp.



6. Glide the heated brush down toward the ends of the hair, using the other hand as before to keep the section taut.



7. As the heated brush nears the end of the hair, release the hair section from the other hand and brush through to the ends.

Never leave your hot paddle brush on and unattended. However, should you fail to turn it off, it will shut itself off automatically within 60 minutes.

USING INSTANT HEAT, THE 3 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling brush features a ceramic heater that maintains constant temperature during use for precision styling.

This Instant Heat technology has 3 high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the hot brush at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

Instructions & Styling
Model BC7 – All Versions
INFINITI^{PRO}
by **CONAIR**



DIAMOND BRILLIANCE®
SHINE SYSTEM

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

FAMILIARÍCESE CON SU CEPILLO PLANO CALIENTE



INSTRUCCIONES DE MANTENIMIENTO

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regréselo a un centro de servicio autorizado. No trate de reparar el aparato.

PRECAUCIÓN

NUNCA jale, tuerza ni retuerza el cable eléctrico. Nunca lo enrolle con fuerza alrededor del aparato; esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.


ALMACENAJE

Después de usar el aparato, desconéctelo, permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No tirene ni retuerza el cable al nivel del enchufe.** No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

ADVERTENCIA: el cuerpo del aparato se pone muy caliente en segundos; evite el contacto con la piel después de encender el aparato.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

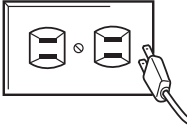

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchúfe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE CUATRO AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un periodo de 48 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio Indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$7.50 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 48 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 48 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.

Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CONSEJOS DE BELLEZA:

Para conseguir los peinados que le gustan o descubrir más productos infiniti by conair® visite: infiniti.conair.com

Para registrar su producto, visítenos en: www.conair.com/registration

Para más información sobre los productos Conair o InfinitiPRO by Conair llame al: **1-800-3-CONAIR** o visítenos en: **www.conair.com/infiniti**

Centro de servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2016 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

16PA022480

IB-14338A

DIAMOND BRILLIANCE® SHINE SYSTEM



Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

Instrucciones

Modelo BC7 – Todas Las Versiones

INFINITI^{PRO}
by **CONAIR**

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en la presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO.

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO

— Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después del uso.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer en agua ni en ningún otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente; **no toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca descuide/deje el aparato sin vigilancia mientras está conectado.**

16. **PARA EVITAR LOS ENREDOS, NO DE MÁS DE DOS VUELTAS ALREDEDOR DEL CEPILLO.**

17. No utilice este aparato con un convertidor de voltaje.

GUARDE ESTAS INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 120 V AC.

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invírtala. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

NOTA: NO UTILICE ESTE APARATO SOBRE CABELLO SINTÉTICO/EXTENSIONES.

FUNCIONAMIENTO BÁSICO

Este aparato con calentamiento instantáneo cuenta con 3 opciones de temperatura ultra-alta, para proporcionar mayor versatilidad durante el peinado, para todo tipo de cabello. Si su cabello es fino, le recomendamos que utilice un nivel de temperatura bajo. Si su cabello es espeso, grueso u ondulado, le recomendamos que utilice un nivel de temperatura alto. ¡Personalice la temperatura, según su tipo de cabello!

MODO DE EMPLEO

El cepillo plano caliente es perfecto para peinar y dar retoques al cabello húmedo o seco. Simplemente deslice en interruptor para elegir el nivel de temperatura y siga los pasos siguientes para desenredar y alisar el cabello.

1. Cerciórese de que el cabello está completamente seco. Cepille el cabello con un cepillo regular para desenredarlo y divídalo en secciones.

2. Coloque el cepillo alisador debajo de la sección de cabello, cerca del cuero cabelludo, con las cerdas apuntando hacia arriba. Con la otra mano, estire el cabello hacia abajo a través de las cerdas, de manera que el cabello quede contra la placa calentadora del cepillo.

3. Deslice el cepillo lento y regularmente hacia las puntas mientras sigue estirando el cabello con la otra mano de manera que quede contra la placa calentadora del cepillo. Nota: cerciórese de mantener la mano alejada del cepillo para evitar las quemaduras.

4. Al llegar a las puntas, suelte estas de la mano y gire el cepillo alisador hacia dentro para dar forma a las puntas.

5. Para dar el acabado y suavizar el cabello, coloque el cepillo alisador por encima de la sección de cabello, cerca de la raíz. Con la otra mano, estire el cabello hacia arriba a través de las cerdas, de manera que el cabello quede contra la placa calentadora del cepillo. Tenga cuidado de no acercarse demasiado la placa calentadora al cuero cabelludo.

6. Deslice el cepillo hacia las puntas



mientras sigue estirando el cabello con la otra mano.

7. Al llegar a las puntas, suelte estas de la mano y termine de cepillar la sección de cabello.

Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

CALENTAMIENTO INSTANTÁNEO, 3 AJUSTES DE TEMPERATURA Y SISTEMA DE RECUPERACIÓN DEL CALOR

Este aparato está dotado de un potente elemento calentador de cerámica que proporciona un calentamiento instantáneo y mantiene la temperatura constante durante el uso.

Cuenta con 3 opciones de temperatura para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más grueso, y siempre obtener los resultados deseados. Cuenta con múltiples opciones de temperatura, para permitirle escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más resistente, y siempre obtener los resultados deseados, también disfruta de los mismos estándares de calidad e ingeniería que los aparatos profesionales y cuenta con un sistema de recuperación del calor. A diferencia de otras herramientas cuya temperatura baja durante el uso, este sistema mantiene la temperatura constante, sin pérdida de calor. Cada sección de cabello está peinada usando la misma temperatura, lo que permite obtener resultados uniformes y peinados perfectos.